




Architectural F Reveal Bead

Architectural F Reveal Bead takes the trimless look to a whole new level, and subtly elevates everyday room details. This solution is your secret weapon for creating sharp, clean edge reveal effects when butting up to door jambs, windows and other unfinished interior architectural components.

Installation Guide

Technical Specs

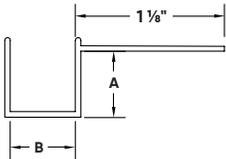

Before Installation:

Measure, cut and dry fit the bead.

Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using 1/2" staples.

Step 4:

Finish with drywall compound.

Step 1:



Step 2:



Step 3:



Step 4:

