




Tear Away Shadow Archway Bead with Flexible Leg

Add a dash of flavor to any room by using the Tear Away Shadow Archway Bead to create a reveal effect when butting up to ceilings, base trims, and other finished interior architectural components. This solution features a tear-off strip to leave a clean finished edge. The archway version creates shadow effects along curved walls or soffits.

Installation Guide

Technical Specs

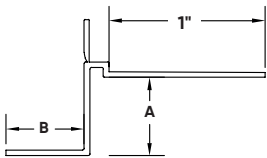

Scan Below for
Installation Video



Step 1:



Step 2:



Before Installation:

Measure, cut and dry fit the bead.

Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive. Press the bead in place, applying pressure to the mud legs.

Step 2:

Staple every 6"-8" using 1/2" staples.

Step 3:



Step 3:

Finish with drywall compound. Remove tear-off strips prior to sanding.